

HYUNDAI
ELECTRONICS

Smart TV

USER MANUAL



PLEASE READ THIS USER GUIDE CAREFULLY BEFORE USING YOUR
DEVICE AND KEEP IT FOR FUTURE REFERENCE!



CONTENTS

SAFETY INSTRUCTIONS	4
MAIN UNIT DESCRIPTION	11
43HYN3203/50HYN3204 / 50HYN3204 / 55HYN3205 / 65HYN3205/ 70HYN3205/75HYN3205/85HYN3205/100HYN3205	11
BACK PANEL DIAGRAM	13
43HYN3203	13
50HYN3204 / 50HYN3205 / 55HYN3205	13
65HYN3205	15
70HYN3205	16
75HYN3205/85HYN3205	16
100HYN3205	17
MAIN UNIT DESCRIPTION	18
43HYN2203	19
MAIN UNIT DESCRIPTION	20
50HYN2205 / 55HYN2205 / 65HYN2205	20
CONTROL PANEL BUTTON FUNCTION	20
43HYN2203	21
50HYN2205 / 55HYN2205 / 65HYN2205	22
MAIN UNIT DESCRIPTION	23
Q50HYN2205 / Q55HYN2205 / Q65HYN2205	23
BACK PANEL DIAGRAM	24
Q50HYN2205 / Q55HYN2205 / Q65HYN2205	24
MAIN UNIT DESCRIPTION	24
M55HYN2205 / M65HYN2205	25
BACK PANEL DIAGRAM	25

M55HYN2205 / M65HYN2205	26
REMOTE CONTROL	27
HOMEPAGE	29
USING HOME DASHBOARD	30
TV SETTINGS	32
QUICK SETTINGS	32
PICTURE	33
PICTURE MODE	33
SOUND	37
SOUND MODE	38
PROGRAM	41
CONNECTION	45
GENERAL	48
ACCESSIBILITY	53
SUPPORT	54
MEDIA	56
SPECIFICATIONS	61
TROUBLESHOOTING	67
INFORMATION	68

SAFETY INSTRUCTIONS



This device contains high voltage electricity. To avoid the risk of electric shock, please do not remove the device cover. If you encounter a problem, please contact one of our authorized service centers.

Any change or incorrect setting of the LED Display can result in electric shock. Do not open the device for maintenance or repair; do not modify the device's equipment; or allow unqualified people to intervene with it. If you encounter any problems, please contact one of our authorized service centers

Precautions Against Permanent Screen Damage

Images remaining still on the screen for more than 2 hours will cause permanent screen damage. Therefore, when using the device, keep the pause times as short as possible and switch off the device if there is a possibility of a prolonged pause. You can also adjust the "Brightness" and "Contrast" settings to lower levels in the event of a pause.

WARNING!



The "exclamation mark in an equilateral triangle" reminds the user of important operating and maintenance (servicing) instructions that must be followed when using the appliance in question.



The "lightning bolt with arrow" or "broken arrow" sign in an equilateral triangle warns the user of the presence of an uninsulated "dangerous voltage" level in the vicinity of the appliance which, if contacted, could pose a hazard to humans.

1. Please read this user guide carefully before using the LED Display and keep it for future reference. If the device is given to another person, give the operating instructions along with the device.
2. Unpack the device and check that there is no damage to the device, its accessories, or the cable. In case of any damage, breakage, or cracks on the device or the cable, or if the accessories are damaged or missing, do not use the device and contact your nearest authorized service center.
3. Plastic bags are extremely dangerous for children and babies. Never allow children and babies to play with the nylon plastic bags of the device or its accessories. Do not leave nylon plastic bags near children and babies.
4. To avoid the risk of fire and electric shock, do not use the appliance in excessively humid and damp conditions or near places with water such as bathrooms, bathtubs, sinks or swimming pools.
5. Do not leave the device in precipitation (exposed to rain, snow, or wind), where water may be splashed or spilled, or in a position where the device may fall into water. Make sure that no water or other liquid gets on the device. Vases, jugs, and other containers filled with water or other liquids should not be placed near the device. Do not use the device in environments where it may be exposed to water vapor or moisture, as well as around humidifiers.
6. Keep the LED display away from all heat sources, such as stoves, radiators, electric stoves, etc., and devices that generate magnetic fields. Do not leave the device or its remote control in the vicinity of flames, fire or liquid sources, or objects that may pose a hazard to avoid the risk of fire or damage to the device.
7. Keep the device, remote-control, remote-control batteries, and other accessories away from direct sunlight and heat sources. Before plugging the device into an electrical outlet, make other connections and make sure that all connections are made correctly.
8. Before making any connections, turn off the device and disconnect the power cord. Before installation, maintenance, cleaning or transportation, unplug the device from the power outlet.
9. Before connecting the device's power plug, ensure that the electrical



network is suitable for the values specified on the device (AC 100-240V-50/60HZ) and that the line is protected with a suitable fuse. Even if the power switch, if any, is turned off, the device must not be disconnected from the power supply unless the power plug is removed from the socket.

10. Insert the power plug into a socket located at the back of the device so that the cord is not stepped on and is easily accessible when needed.
11. Make sure that the power plug is fully inserted into the socket. Make sure that there is no water, moisture or dust in the inlet of the power plug and socket.
12. It is the responsibility of the consumer to ensure that the electrical network for the device is suitable and that it is installed by a qualified electrician. The manufacturer cannot be held responsible for any damage to the device caused by the use of the device in electrical networks that do not comply with local regulations.
13. Never use broken or deformed electrical sockets. Remove the power plug from the socket by holding the plug, do not pull by the cord. Do not leave the power cord of the device under or on objects such as carpets or rugs where it can be stepped on, and avoid crushing the power cord. If the power cable is damaged, do not use the device and contact an authorized service center.
14. Do not use an extension cord or socket group to operate more than one high-power electrical device in the same socket. Overloading the power outlet can cause fire and electric shock. If an extension cable is required, make sure it meets the device's specifications.
15. Do not overtwist, knot, connect, or coil the device's power cable to other connecting cables or the power cables of other devices.
16. Do not leave the power cord of the appliance on wet or hot surfaces, and keep it out of the reach of children.
17. Never open the back cover of the device and do not attempt to modify the equipment. The device contains non-isolated hazardous voltage, which could result in electric shock and other life-threatening hazards.
18. Only use original and manufacturer-authorized accessories with the device.

19. Make sure that no part of the device, particularly the screen, has been hit or broken. Impact to the device or the screen may cause malfunction of the device and serious injury.
20. Be careful not to scratch the screen. Hard or sharp objects can easily damage the screen. Also, do not apply excessive pressure to the screen with your hand or any other object.
21. Place the device on a hard, level surface that can support its weight; never place it on a slanted surface. Use only the stand, mounting bracket, or other accessories supplied with the device or recommended by the manufacturer to prevent possible tipping. Only mount the LED display on the wall or ceiling as recommended.
22. Unplug the device from the mains socket during thunderstorms, heavy rain, and when it will not be used for a long period of time.
23. Never cover the device. Do not cover the ventilation holes of the device with cloths, newspapers, etc. Allow at least 10 cm of ventilation space on the back, sides, and top of the device.
24. Do not use the device in potentially hazardous or poorly ventilated areas. Do not use the device in narrow and closed spaces such as shelves and display cases, without proper ventilation.
25. Do not place any objects on the device.
26. Do not allow any solid or liquid substances to enter through the ventilation holes on the device. Metal objects and liquids, in particular, pose a risk of short circuiting or electric shock, as well as device damage and fire. If solid or liquid substances get into the device, immediately disconnect the power plug from the socket and do not operate the device again until it has been checked by an authorized service center.
27. The device is intended for home use. Do not use the device outside. Use the device only for its intended purpose; do not use it for industrial or commercial purposes.
28. The manufacturer is not responsible for any malfunction or damage caused by improper or incorrect use.

29. The following are some general rules to follow when using any electrical device.
30. Never touch the device and the power cord with wet or damp hands.
31. Never leave the device out in the rain, near water, in extremely humid environments, or in direct sunlight.
32. Inspect the device and the power cable for damage on a regular basis.
33. Before cleaning the device, turn it off and remove the power plug from the socket. Clean the device periodically. Wipe the device down with a slightly damp soft cloth and then dry with a dry soft cloth. Do not spray cleaning agents on the device, immerse it in water or other liquids, or pour water or other liquids on it. Do not use abrasive materials to scrape the device's surface.
34. Do not pour or spray any liquid on the screen for cleaning purposes. Do not use excessive pressure on the screen during cleaning. Otherwise, it may cause scratches on the screen and image distortion.
35. Do not leave the device running and walk away from it for an extended period of time. When not in use, turn off the device and remove the power plug from the socket.
36. Do not allow small children to use or play with the device. Do not leave the device running in the presence of children, and walk away from them. Do not allow children to come into contact with the device while it is working.
37. Do not allow small children to play with the remote control or other accessories, and keep the remote control and other accessories out of the reach of children. Swallowing remote control batteries or small accessories can be life-threatening. In case of battery swallowing, contact a health care provider immediately.
38. Do not use the device near or in the presence of flammable, combustible, or explosive materials. Make sure there is no gasoline, thinner, alcohol, paint, or any other flammable or combustible material in the area where the device will be used.
39. Do not use the device in excessively dusty environments where hot particles or sparks may enter the device.

40. When using the device with headphones, make sure that the volume is not too high. High levels of noise can result in temporary or permanent hearing loss.
41. Watching a screen in darkness or low light can cause eye strain. It is recommended that the screen be watched at an appropriate light level.
42. The USB terminal of the device must not be loaded with currents higher than 0.5 A (500 mA).
43. When the device is watched from different angles, the color and brightness of the image may differ. This is normal and does not indicate a problem with the device.
44. On the screen, small black and/or brightly colored dots up to 1 ppm in size may be present. These points do not indicate that the product is defective and do not affect its performance or reliability.
45. Do not mix old and new batteries, as well as batteries from different brands, models, and types. Replace dead batteries with new ones of the same size and capacity.
46. Dead batteries should be disposed of in accordance with local laws and regulations and should not be thrown away with other household waste.
47. If the device is struck or damaged in any way, if foreign objects enter the device, or if odors or smoke emanate from the device, immediately disconnect the power plug from the mains and contact an authorized service center.
48. This device is not intended for use by people with physical, sensory, or mental disabilities, inexperienced or uninformed people, or children who are not supervised by an adult.
49. In the event of damage to the power cable, never use the device, do not attempt to replace the cable yourself, or allow unauthorized persons to intervene with the device. The power cable must be replaced with a suitable cable by an authorized service center.
50. If the device is damaged or malfunctioning, immediately turn it off and remove power plug from the socket. Do not use damaged devices. Never

open the device cover, attempt to repair the device yourself, or allow unauthorized persons to intervene with the device without contacting an authorized service center.

51. Do not allow small children to play with the remote control and remote control batteries, and keep the remote control out of the reach of children. Swallowing remote control batteries or accessories can be life-threatening. In case of battery swallowing, contact a health care provider immediately.

Matters to be Considered During Transportation and Shipping:

1. Transport the device in its original packaging and protective accessories.
2. During handling or transportation, do not allow the device to fall, be crushed, or be hit in any way. Do not use the device if it has been dropped or hit, and contact an authorized service center.

Precautions Against Permanent Screen Damage

Images remaining still on the screen for more than 2 hours may cause permanent screen damage. Therefore, when using the device, keep the pause times as short as possible and switch off the device if there is a possibility of a prolonged pause. You can also adjust the "Brightness" and "Contrast" settings to lower levels in the event of a pause.

 
Note: All illustrations, diagrams and function descriptions in this manual are for reference only. The manufacturer reserves the right to make changes in product appearance, specifications and functions without prior notice. Please keep in mind that the software may alter the device's functionality.

Please note:

When you use a USB with an external device, if the current is too large, the external equipment will need an external power supply (such as a mobile hard disk or mobile drive).

Main unit description

**43HYN3203/50HYN3204 / 50HYN3204 / 55HYN3205 /
65HYN3205/ 70HYN3205/75HYN3205/85HYN3205/100HYN3205**

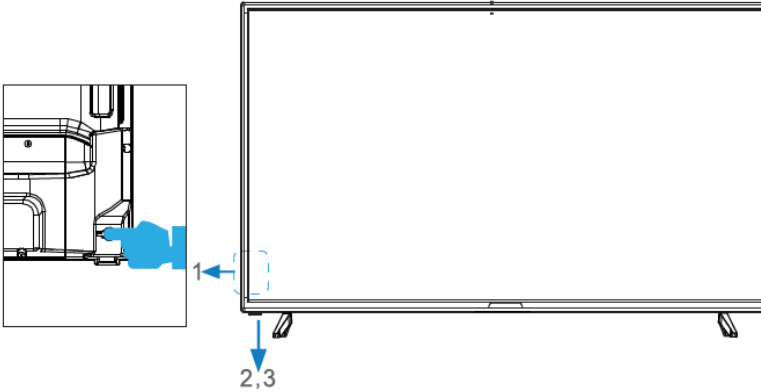






a: Press 1 key to achieve (⏻ 📄 ↻ ▲ ▼ + -) Functional operation.

b: Press the call out function menu once, and press the twice or so to move the switch function icon.

(Note: The first press of this button will default to the first icon)

 c: Long press the button to confirm entering this function, use (⏻ 📄 ↻ ▲ ▼ + -) related functional operations.




ITEM	BUTTON NAME	FUNCTION DESCRIPTION
1		Switch on the TV when in standby mode or vice versa.
		Press to bring up the main menu to the screen.
		Press to select the input source and menu submenu confirm button.
		Press to scan through channels and move up and down.
		Press to increase or decrease the sound level and move direction left and right.
2	POWER INDICATOR	Indicator illuminates RED in standby mode and GREEN when TV is switched on
3	REMOTE SENSOR	Infrared sensor for the remote control.


Note: All images, diagrams and function descriptions in this manual are for reference purposes. The manufacturer reserves the right to make changes in product appearance, technical specifications and functions without prior notice. Please note that the software may change the functionality of the device.

BACK PANEL DIAGRAM

 43HYN3203


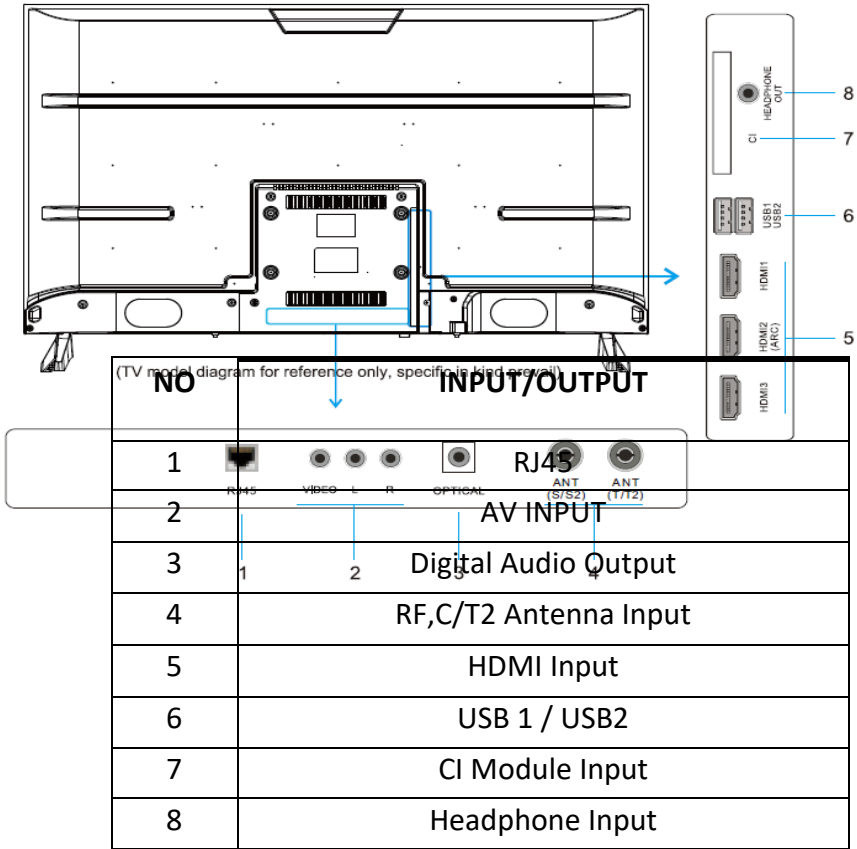


50HYN3204 / 50HYN3205 / 55HYN3205

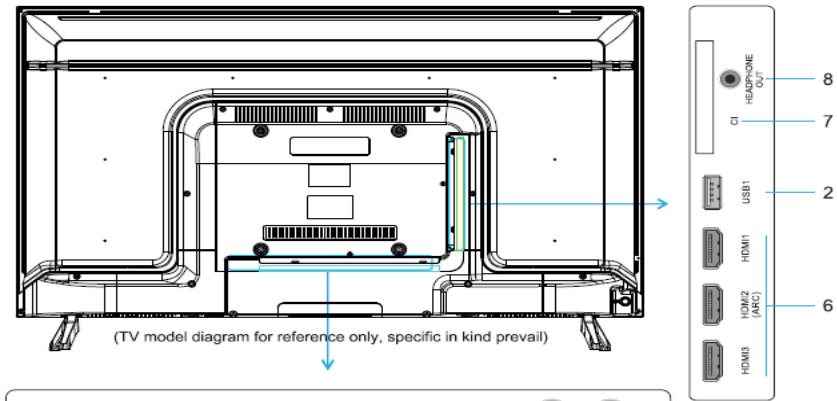 






NO	INPUT/OUTPUT
1	RJ45
2	USB 1 / USB2
3	Digital Audio Output
4	AV Input
5	RF,C/T2 Antenna Input
6	HDMI Input
7	CI Module Input
8	Headphone Input

  65HYN3205

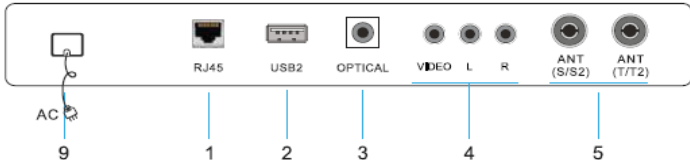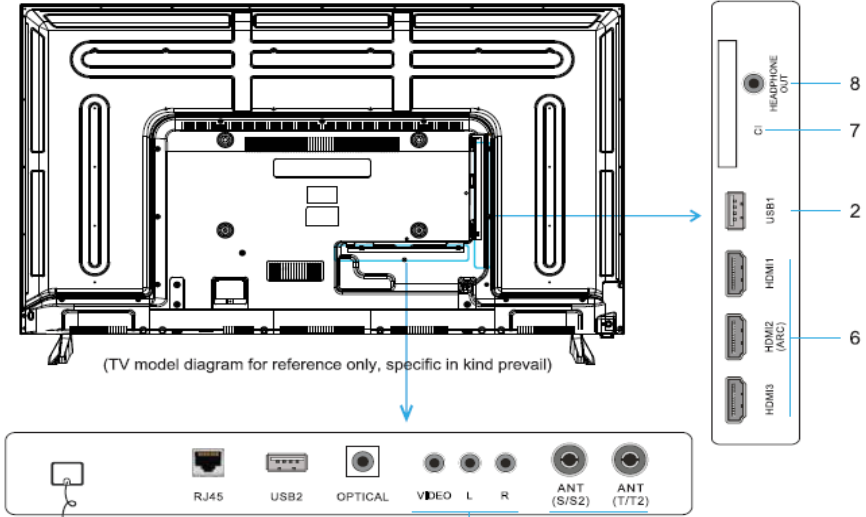


NO	INPUT/OUTPUT
1	RJ45
2	USB 1 / USB2
3	Digital Audio Output
4	AV Input
5	RF,C/T2 Antenna Input
6	HDMI Input
7	CI Module Input
8	Headphone Input

     
70HYN3205

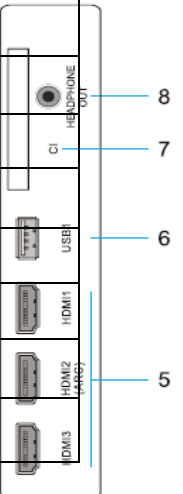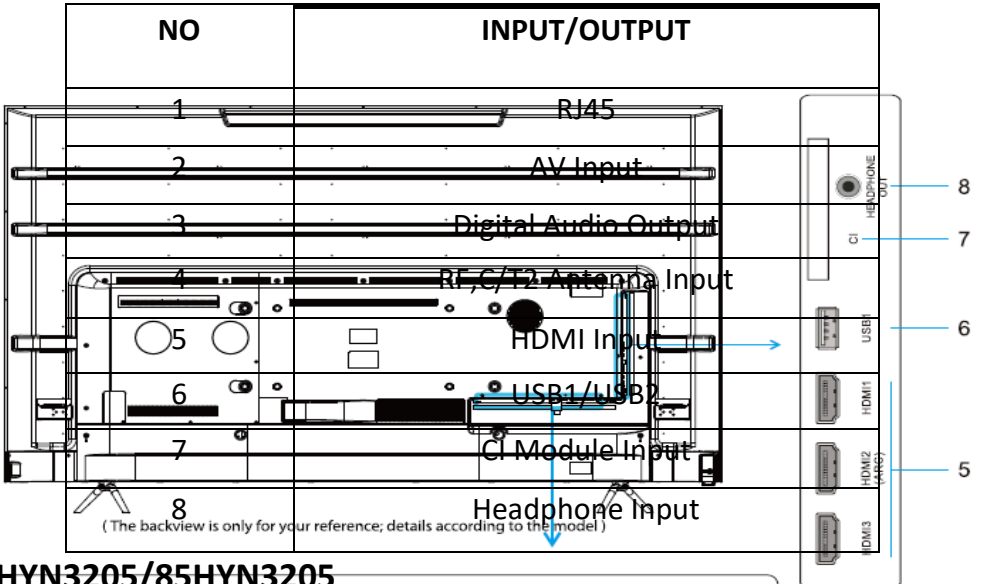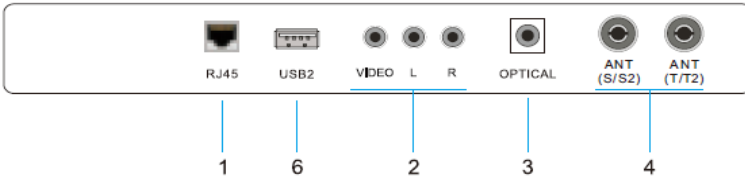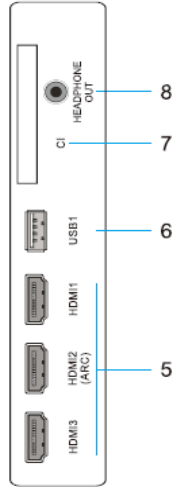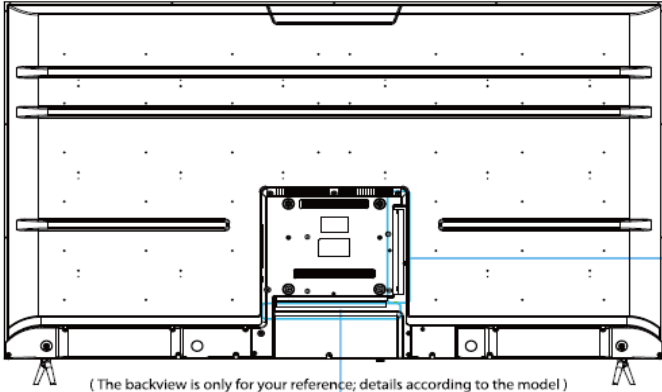

75HYN3205/85HYN3205

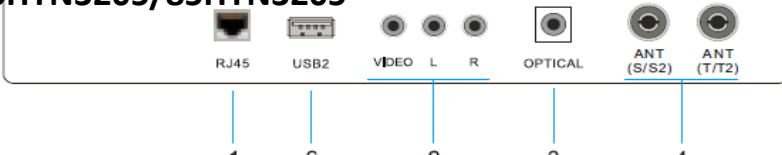 

100HYN3205

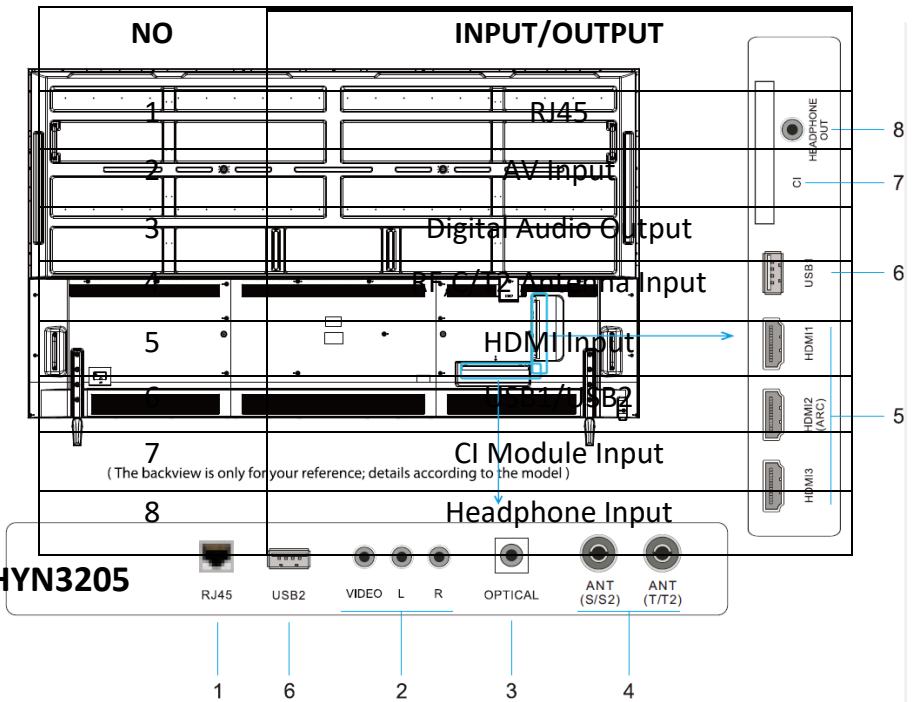 


**Main
unit**

NO	INPUT/OUTPUT
1	RJ45
2	AV Input
3	Digital Audio Output
4	RF,C/T2 Antenna Input
5	HDMI Input
6	USB1/USB2
7	CI Module Input
8	Headphone Input

description

 
43HYN2203

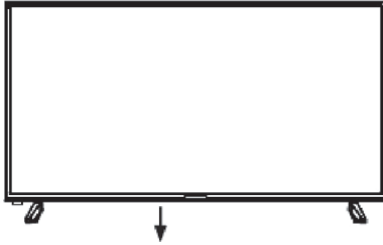



Display\ hidden button menu: press the button in the pop-up menu, as shown below. The button menu will be closed automatically after the button is not operated for 5 seconds.


Button function selection: press the button shortly, move the focus to the right, and select the corresponding function, such as the short press on the button for 6 times the focus position as shown in the below picture.

Key function operation: long press key can perform focus function, such in the position shown above, will perform channel reduction.


 Power off function, which corresponds to the "power" button of the menu.


 Display the menu, which corresponds to the "menu" button of the remote control.

 Display the signal source menu, which corresponds to the "signal source" button of the remote control.

 Increase the volume, which correspond to the "volume +" button of the remote control.

 Decrease the volume, which correspond to the "volume -" button of the remote control.

 
 Switch the channel forwards, which correspond to the "channel +" button for the remote control.

 Switch the channel backwards, which correspond to the "channel -" button for the remote control.

Main unit description

50HYN2205 / 55HYN2205 / 65HYN2205



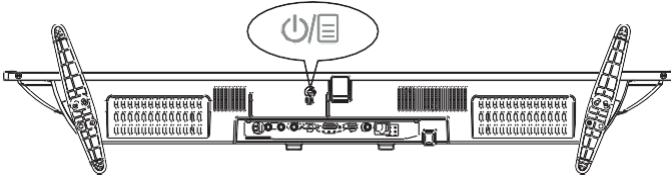




Control Panel Button Function



 
Display\ hidden button menu: press the button in the pop-up menu, as shown below. The button menu will be closed automatically after the button is not operated for 5 seconds.

Button function selection: press the button shortly, move the focus to the right, and select the corresponding function, such as the short press on the button for 6 times the focus position as shown in the below picture.

Key function operation: long press key can perform focus function, such in the position shown above, will perform channel reduction.


-  Power off function, which corresponds to the "power" button of the menu.
-  Display the menu, which corresponds to the "menu" button of the remote control.
-  Display the signal source menu, which corresponds to the "signal source" button of the remote control.
-  Increase the volume, which correspond to the "volume +" button of the remote control.
-  Decrease the volume, which correspond to the "volume -" button of the remote control.
-  Switch the channel forwards, which correspond to the "channel +" button for the remote control.
-  Switch the channel backwards, which correspond to the "channel -" button for the remote control.

43HYN2203

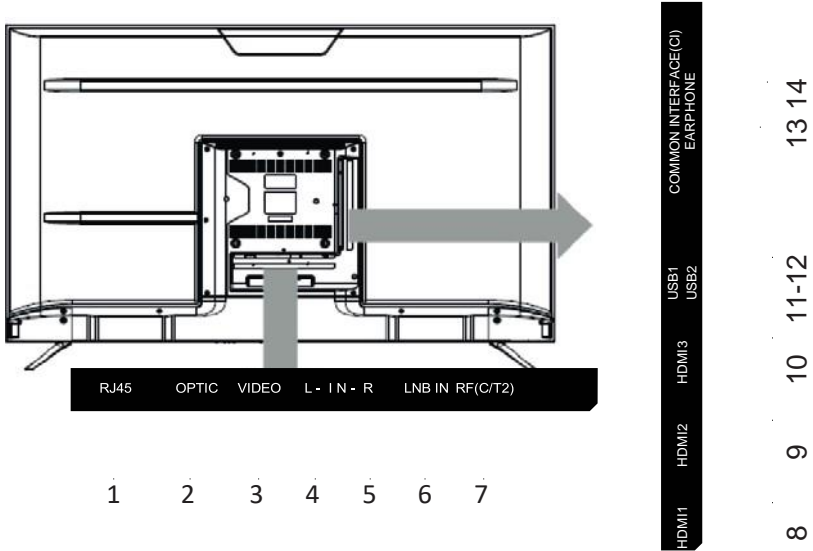

NO	INPUT / OUTPUT	NO	INPUT / OUTPUT
1	RJ45	8	HDMI Input 1
2	Optic Digital Audio Output	9	HDMI Input 2
3	Video Input	10	HDMI Input 3
4	Audio Input (L)	11	USB 1
5	Audio Input (R)	12	USB 2
6	LNB Input	13	Headphone Input
7	RF,C/T2 Antenna Input	14	CI Module Input

 50HYN2205 / 55HYN2205 / 65HYN2205

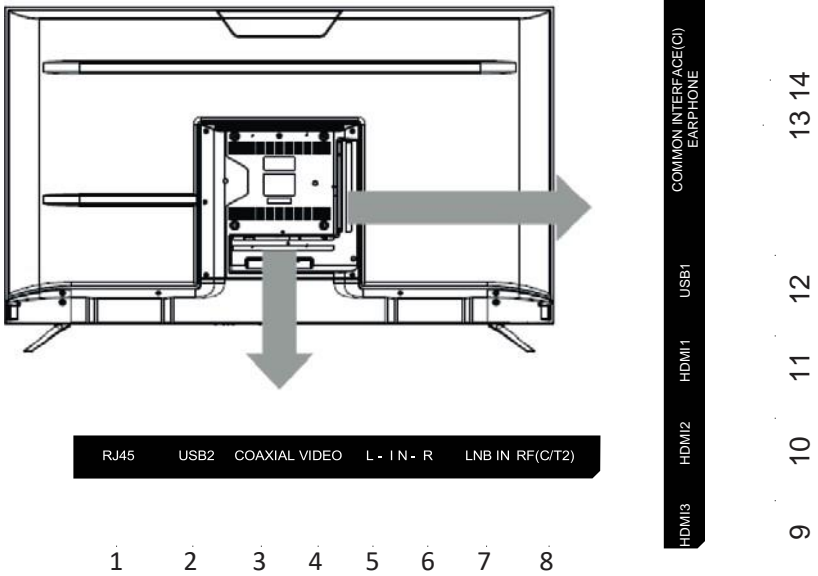


NO	INPUT / OUTPUT	NO	INPUT / OUTPUT
1	RJ45	8	RF,C/T2 Antenna Input
2	USB 2	9	HDMI Input 1
3	Coaxial Digital Audio Output	10	HDMI Input 2
4	Video Input	11	HDMI Input 3
5	Audio Input (L)	12	USB 1
6	Audio Input (R)	13	Headphone Input
7	LNB Input	14	CI Module Input

Main unit description

Q50HYN2205 / Q55HYN2205 / Q65HYN2205

 
Control Panel Button Function

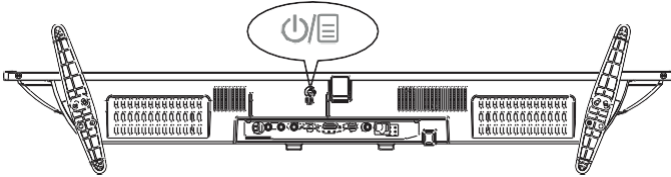



Display\ hidden button menu: press the button in the pop-up menu, as shown below. The button menu will be closed automatically after the button is not operated for 5 seconds.


Button function selection: press the button shortly, move the focus to the right, and select the corresponding function, such as the short press on the button for 6 times the focus position as shown in the below picture.


Key function operation: long press key can perform focus function, such in the position shown above, will perform channel reduction.


 Power off function, which corresponds to the "power" button of the menu.


 Display the menu, which corresponds to the "menu" button of the remote control.

 Display the signal source menu, which corresponds to the "signal source" button of the remote control.

 Increase the volume, which correspond to the "volume +" button of the remote control.

 
 Decrease the volume, which correspond to the "volume -" button of the remote control.

 Switch the channel forwards, which correspond to the "channel +" button for the remote control.

 Switch the channel backwards, which correspond to the "channel -" button for the remote control.

BACK PANEL DIAGRAM

Q50HYN2205 / Q55HYN2205 / Q65HYN2205

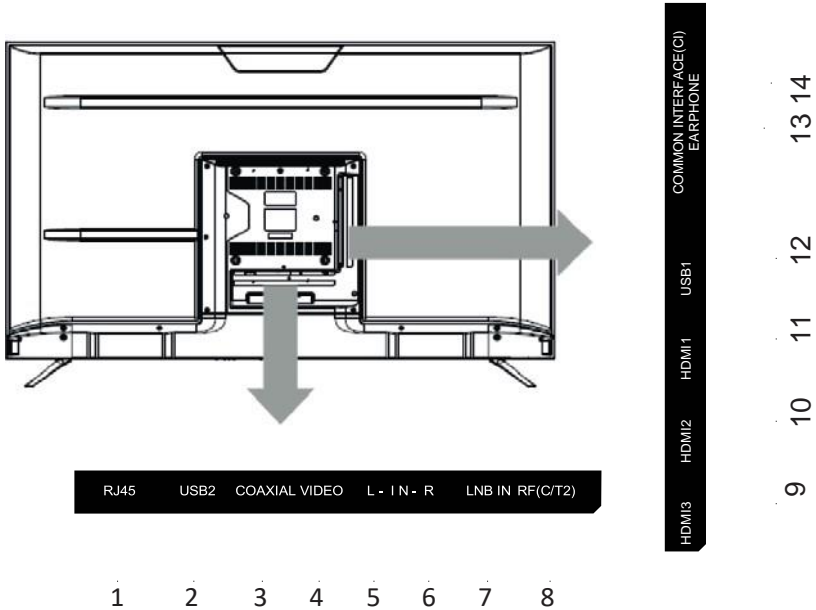


NO	INPUT / OUTPUT	NO	INPUT / OUTPUT
1	RJ45	8	RF, C/T2 Antenna Input
2	USB 2	9	HDMI Input 1
3	Coaxial Digital Audio Output	10	HDMI Input 2
4	Video Input	11	HDMI Input 3
5	Audio Input (L)	12	USB 1
6	Audio Input (R)	13	Headphone Input
7	LNB Input	14	CI Module Input

Main unit description

M55HYN2205 / M65HYN2205

 
Control Panel Button Function

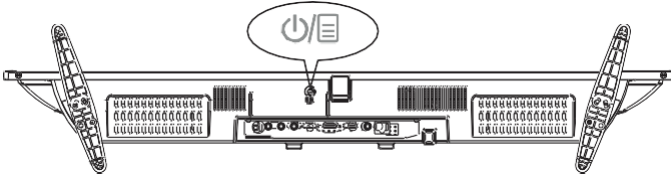



Display\ hidden button menu: press the button in the pop-up menu, as shown below. The button menu will be closed automatically after the button is not operated for 5 seconds.


Button function selection: press the button shortly, move the focus to the right, and select the corresponding function, such as the short press on the button for 6 times the focus position as shown in the below picture.


Key function operation: long press key can perform focus function, such in the position shown above, will perform channel reduction.


 Power off function, which corresponds to the "power" button of the menu.


 Display the menu, which corresponds to the "menu" button of the remote control.

 Display the signal source menu, which corresponds to the "signal source" button of the remote control.

 Increase the volume, which correspond to the "volume +" button of the remote control.

 
 Decrease the volume, which correspond to the "volume -" button of the remote control.

 Switch the channel forwards, which correspond to the "channel +" button for the remote control.

 Switch the channel backwards, which correspond to the "channel -" button for the remote control.

BACK PANEL DIAGRAM

M55HYN2205 / M65HYN2205

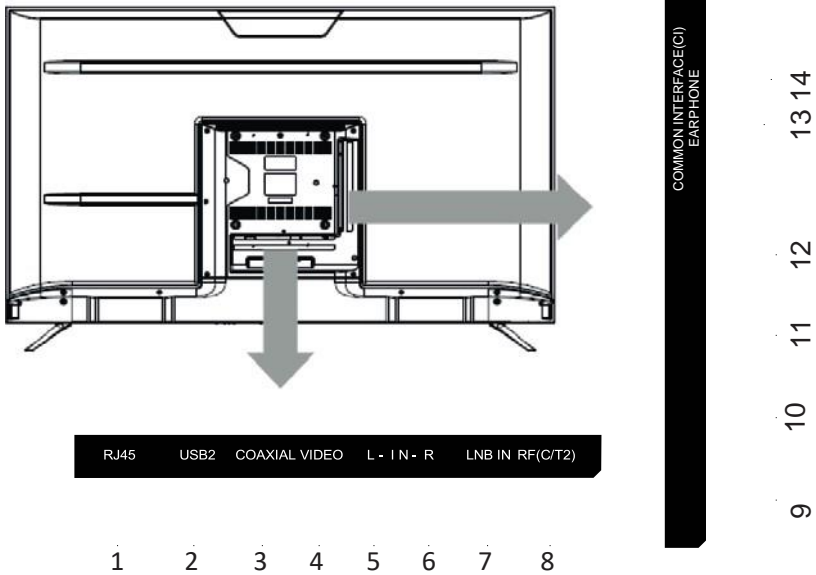

NO	INPUT / OUTPUT	NO	INPUT / OUTPUT
1	RJ45	8	RF, C/T2 Antenna Input
2	USB 2	9	HDMI Input 1
3	Coaxial Digital Audio Output	10	HDMI Input 2
4	Video Input	11	HDMI Input 3
5	Audio Input (L)	12	USB 1
6	Audio Input (R)	13	Headphone Input
7	LNB Input	14	CI Module Input

REMOTE CONTROL

#: To use the button' Press and hold more than 1 second Need to register this Magic Remote first.



POWER(⏻): Turns the TV on or off.

(⏻): You can turn on/off the power of the set-top box by adding the box to universal remote in TV.

LIST: Checking the Channel List.

0#: The QUICK ACCESS edit screen appears.

Number buttons: Choose the channel directly

(...): It displays the additional function on the remote control.

(AD/SAP) #: Second Audio Program.

(Some models may not be supported.)

(🔊 +/-) It adjusts the volume level.

(🔇) Select to turn off the sound from the TV.

(🔇#): Enter the Accessibility menu.

(⏮ ⏭) You can change the program up or down.

(🗣) Check out the recommended contents.

(Recommendation service may not be available depending on the countries you are in.) Push and hold the button while speaking to use the voice recognition function Go to All setting →General AI Service →Voice Recognition help for more voice command

(🏠): Displays the Home menu.

(🏠)#Displays the last used APP, you can also select to close then.

(⚙): Enters the Quick Settings menu.



()#: Enters the All Settings menu.

(): Move to the previous step.

()#: Closes the menu.

GUIDE: Check the program schedule.

(): Selects an input source.

()#: Entering into the Home Dashboard.

() Wheel (ok): press the center button to select, Turn up or down to scroll channels.

Navigation buttons: (Up/Down/Left/Right / / /)

Navigate the menu.

PLAY (): Play while watching media.

PAUSE (): Pause while watching media.

MOVIES: Search Movies. (make sure the Internet connection is normal)

NETFLIX: Access the Netflix interface.

Prime Video: Access the Prime Video interface.

Color Buttons (RED/GREEN/YELLOW/BLUE): Execute the prompt function in specific mode.

HOMEPAGE

Enter the Home page after First Time install



Search

You can search for channels, programmers, movie titles and apps from Smart Hub.



Home Dashboard

You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.

For more information, see **Connecting External Devices** Using Home Dashboard in **User Guide**.



TV

Move to the TV input you used recently.



Recents

Move to the recently used app. You can run or close a recently used app in the list provided in the Preview area at the top.

Using Home Dashboard

You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.

Press ◀ \ ▶ \ ▼ \ ▲ button to select.

You can check and select the smart device connected with the LG ThinQ app.

Please refer to Connecting External Devices → Connecting Smart Devices in User Guide for more information on the action.

② You can play sound from a smart device connected via Bluetooth.

Please refer to Connecting External Devices → Playing Sound from a Smart Device through the TV's Speakers in User Guide for more information on the action.

③ You can check and select the external device connected through the external input port or network.

④ The currently selected output speaker is displayed, and you can navigate to the output speaker settings screen.

⑤ You can view and select the connected storage device.

⑥ You can check and control the device connected via the Home IoT.

Please refer to Connecting External Devices → Connecting Home IoT Devices in User Guide for more information on the action.

⑦ You can easily control your device by presetting the desired operations.

⑧ **Sign In:** You can log in/out to and from the LG ThinQ account you created on mobile.

Edit: You can edit the name of the device connected to **Inputs** or **Home IoT Devices** or configure the related settings.

⑨ It refreshes the device list.

⑩ Exit the Home Dashboard.

TV Settings

Press MENU button to enter the TV Setting.

Press ◀ / ▶ button to highlight the desired menu icon, and press OK button to select.

Quick Settings

- ① You can set **Picture Mode**.
- ② You can set **Sound Mode**.
- ③ You can choose **Sound Out**.
- ④ You can set **Sleep Timer**.
- ⑤ Move to the **Connection** screen.
- ⑥ You can set more options.
- ⑦ You can add/delete the quick setting items or change their order.

Picture

Press **MENU** button to enter the main menu. Or press ◀ / ▶ button to select **Setting** on the Home page.

Press ▼ / ▲ button to select the Picture.

Press **OK** button to enter the sub-menu.

Press ▼ / ▲ button to select Picture Mode Settings/Aspect Ratio Settings/Energy Saving/Additional Settings.

Press **MENU** or **EXIT** button to quit.

Picture Mode Settings

Highlight the item and press OK button to enter the sub-menu, that shows the picture mode you can choose.

Press ▼ / ▲ button to select Picture Mode /Backlight /Contrast / Brightness/Sharpness/Colour/Tint/Colour Temperature/Advanced Controls/Picture Options/apply to all inputs/Reset.

Picture Mode

Press ▼ / ▲ button to select Vivid/Eco/Cinema/Sports.

Vivid Sharpens the image by increasing the contrast, brightness and sharpness.

ECO The Energy Saver feature changer setting on the TV to reduce power consumption.

Cinema Is suitable for watching TV or movies in a dark room.

Sports Suitable picture for sport games. Sharpens the image of rapid movements such as kicking or throwing a ball.

Backlight / Contrast / Brightness/ Sharpness/ Colour/ Tint / Colour Temperature

Press ▼ / ▲ button to select Backlight/ Contrast/ Brightness/ Sharpness/ Colour/ Tint/ Colour Temperature.

Press ◀ / ▶ button to adjust.

Advanced Controls

Press ▼ / ▲ button to select Advanced Controls.

(Optional) Dynamic Contrast/Dynamic Colour/Gamma

Dynamic Contrast/Dynamic Colour

Press ▼ / ▲ button to select Dynamic Contrast/Dynamic Colour, press OK button to select Off/Low/Medium/ High.

Gamma

Press ▼ / ▲ button to select Gamma, press OK button to select Low/Medium/High 1/High 2.

Picture Options

Press ▼ / ▲ button to select Picture Options.

(Optional: Noise Reduction/ Black Level/Real Cinema)

Noise Reduction

Press ▼ / ▲ button to select Noise Reduction, press OK button to select Off/Low/Medium/High Auto.

Black Level

Adjusts the brightness of the dark parts of images.

Press ▼ / ▲ button to select Black Level, press OK button to select.

Real Cinema

Optimize display for movies.

Press ▼ / ▲ button to select Real Cinema, press OK button to select.

Apply to all inputs

Apply to all inputs Apply the detailed setting values of current picture mode to all inputs or apps.

Press ▼ / ▲ button to select Apply to all inputs.

Reset

If you want to reset the image settings to the factory defaults after configuring the image settings, select reset for each image mode.

Press ▼ / ▲ button to select Reset.

Aspect Ratio Settings

You can change the screen size according to the type of content you are watching.

Press ▼ / ▲ button to select Aspect Ratio/ Just Scan.

Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio.

(Optional: 16:9/ Original/ Full Wide/ 4:3/ Vertical Zoom/ 4-Way Zoom)

Just Scan

Press ▼ / ▲ button to select Just Scan.

If you turn this feature **On**, you can view the content in the aspect ratio that is in the broadcast signal or content source. If the edge of the screen is not clean, please turn it **Off**

Energy Saving

Reduces power consumption by adjusting screen brightness.

Press ▼ / ▲ button to select Off/Minimum/Medium/Maximum/Screen Off.

Eye Comfort Mode

The color temperature will be adjusted to reduce eye fatigue.

Press ◀ / ▶ button to select Off/On

Sound

Press **MENU** button to enter the main menu. Or press ◀ / ▶ button to select **Setting** on the Home page.

Press ▼ / ▲ button to select the Sound.

Press **OK** button to enter the sub-menu.

Press ▼ / ▲ button to select Sound Mode Settings/Sound Out/Additional Settings. Press **MENU** or **EXIT** button to quit.

Highlight the item and press OK button to enter the sub-menu, that shows the sound mode you can choose.

Press ▼ / ▲ button to select Sound Mode/ Balance/ Virtual Surround Plus/Equalizer/ Reset.

Sound Mode

Press ▼ / ▲ button to select Standard/ Cinema/ Clear Voice III/ Sports/ Music/ Game.

Standard	Optimizes the sound for all types of content.
Cinema	Optimizes the sound for cinemas.
Clear Voice III	Boosts voice clarity.
Sports	Optimizes the sound for sports games.
Music	Enhance the high pitch and reduce the bass. Optimizes
Game	the Optimizes the sound for gameplay.

Balance

Balanced left and right channels.

Press ▼ / ▲ button to select Balance. Press ◀ / ▶ button to adjust.

Virtual Surround Plus

Enjoy an immersive soundscape with the virtual multi-programme surround sound effect.

Press ▼ / ▲ button to select Virtual Surround Plus. Press **OK** button to select On / Off.

Equalizer

Press ▼ / ▲ button on to select Equalizer.

Press OK button to enter sub-menu then press ◀ / ▶ button to adjust.

Reset

You can reset the sound effect settings.

Press ▼ / ▲ button to select Reset.

Sound Out

Press ▼ / ▲ button to select Internal TV Speaker/ Bluetooth/ Mobile Device/ Optical/ HDMI ARC/ Wired Headphones/ Optical + Internal TV Speaker/ Wired Headphones + Internal TV Speaker.

Press ▼ / ▲ button to select and press OK button to setup.

Additional Settings

Press ▼ / ▲ button to select TV Installation Type/ Volume Mode/ DTV Audio Setting/ AV Sync Adjustment/ HDMI Input Audio Format/ LG Sound Sync/ Digital Sound Out.

TV Installation Type

Press ▼ / ▲ button on to select TV Installation Type.

Press ▼ / ▲ button to select Stand/Wall-mounted.

Volume Mode

Press ▼ / ▲ button on to select Volume Mode.
(Optional: Auto Volume/ Volume Increase Amount)

Auto Volume

Press ▼ / ▲ button on to select Auto Volume. Press OK button to select On/Off.

Volume Increase Amount

Press ▼ / ▲ button on to select Volume Increase Amount.
(Optional: Low/ Medium /High)

DTV Audio Setting

Press ▼ / ▲ button on to select DTV Audio Setting.
(Optional: MPEG/ Dolby Digital/ Dolby Digital Plus/ HE-AAC/Auto)

AV Sync Adjustment

Press ▼ / ▲ button on to select AV Sync Adjustment. Press OK button to enter and adjust

HDMI Input Audio Format

Press ▼ / ▲ button on to select HDMI Input Audio Format.
You can set the audio format for each HDMI input. When the voice delivered through the HDMI port is not synchronized, set it to **PCM**.

LG Sound Sync

Press ▼ / ▲ button on to select LG Sound Sync.

Connect the LG Sound Sync device to the optical digital input port and set Sound Out to Optical.

By setting this feature to On, you can adjust the volume of the connected LG Sound Sync device using a TV remote control.

Digital Sound Out

Press ▼ / ▲ button on to select Digital Sound Out. (Optional: PCM/Auto/Pass Through)

Program

Press **MENU** button to enter the main menu. Or press ◀ / ▶ button to select **Setting** on the Home page.

Press ▼ / ▲ button to select the Program.

Press **OK** button to enter the sub-menu.

Press ▼ / ▲ button to select Program Tuning & Settings/Program Manager/HbbTV/CI Information/Copy Program.

Press **MENU** or **EXIT** button to quit.

Program Tuning & Settings

Highlight the item and press OK button to enter the sub-menu.

Press ▼ / ▲ button to select Auto Tuning/ Manual Tuning/ Program

Mode/Program List Update/ Signal test.

Auto Tuning

Automatically tunes the program.

Press ▼ / ▲ button to select Auto Tuning.
(Optional: Antenna/Cable/Satellite)

Then press ▼ / ▲ button to select Next button to setup and tuning.

Manual Tuning

This function is for manually searching and saving program.

Press ▼ / ▲ button to select Auto Tuning. (Optional. Antenna DTV/Antenna TV)

Then press ▼ / ▲ button to select Next button to setup and tuning.

Programme Mode

Press ▼ / ▲ button to select Programme Mode. (Optional: Antenna / Cable / Satellite)

Programme List Update

Press ▼ / ▲ button to select Programme List Update.
Press **OK** button to select On/Off.

Signal Test

Shows the MUX and Service information etc.

Press ▼ / ▲ button to select Signal Test.

Note: It is only available in Antenna or Cable mode.

Programme Manager

Highlight the item and press OK button to enter the sub-menu.

Press ▼ / ▲ button to select Programme Manager.

You can lock or unlock the selected programmes from all the stored programmes, or you can set them to be skipped when switching programmes.

Edit All Programmes

Set the sorting option.

② **Lock / Unlock:** Lock the selected programmes or unlock the locked programmes.

Skip / Restore: Set the selected programmes to be skipped when switching programmes, or disable the skipping option of the programmes previously set to be skipped.

① **Move:** Move the selected programmes.

Edit Programme Numbers: Change the numbers of the selected programmes.

Delete: Delete the selected programmes.

Edit Favorites

Select the desired programmes from the all-programmes list and press the button to add them to the favorite programmes list.

Delete the selected programmes from the favorite programmes list

Move: Select one or more programmes in the Preferred Programmes list, press the Move button, and then select the position to move it to. The selected programmes will move to the position you selected.

Change Group Name: Change the name of the favorite programmes list.

Sort by Programme: Sorts the list of favorite programmes by programme.

HbbTV

Press ▼ / ▲ button to select HbbTV. Press OK button to enter submenu.
Press ▼ / ▲ button to select.

CI Information/Copy Programmes

Press ▼ / ▲ button to select CI Information/Copy Programmes. Press **OK** button to enter sub-menu.

Connection

Highlight the item and press OK button to enter the sub-menu.

Press ▼ / ▲ button to select Connection.

Wi-Fi Connection

Press ▼ / ▲ button to select Wi-Fi Connection. Press OK button to enter sub-menu and setup.

Device Connection Settings

You can link the information about the devices connected to the TV and configure settings related to operations.

Press ▼ / ▲ button to select Device Connection Settings. Press OK button to enter sub-menu.

Auto Device Detection/SIMPLINK (HDMI-CEC)/Auto Power Sync

Press ▼ / ▲ button to select Auto Device Detection/SIMPLINK (HDMI-CEC)/Auto Power Sync. Press OK button to select On/Off.

LG Wireless Keyboard

Press ▼ / ▲ button to select LG Wireless Keyboard. Press **OK** button to enter sub-menu.

This feature enables you to connect a LG wireless keyboard to your TV.

Turn on the device, set it to pairing mode, and then click **Connect** on your TV screen. If there is a LG wireless keyboard previously connected, it will be automatically reconnected to your TV once your TV turns on. To disconnect the existing connection, click **Disconnect**.

Universal Control Settings

Press ▼ / ▲ button to select Universal Control Settings.

Press **OK** button to enter sub-menu.

If you set up the universal remote control, you can control peripheral devices connected to the TV with the Magic Remote instead of their own remote controls.

Mobile Connection Management

You can set to use a smart device connected to the TV to control the TV or manage the connection history.

Press **▼ / ▲** button to select Mobile Connection Management. Press **OK** button to enter sub-menu.

TV On with Mobile

Press **▼ / ▲** button to select TV On with Mobile. Press **OK** button to enter sub-menu.

If **turn on via Wi-Fi** or **Turn on via Bluetooth** is set to **On**, you can turn on your TV using an application that supports **TV On with Mobile**.

Screen Share

Press **▼ / ▲** button to select Screen Share. Press **OK** button to setup.

You can delete the connection history of the device that was connected to the TV through Screen Share.

Sound Share

Press **▼ / ▲** button to select Sound Share. Press **OK** button to setup.

TV Name

You can use the screen keyboard to set the name for the smart TV to be used on the network.

Press ▼ / ▲ button to select TV Name. Press **OK** button to enter sub-menu.

Network Connection Settings

If you configure settings for the network, you can use various services such as online contents and applications.

Press ▼ / ▲ button to select Network Connection Settings. Press **OK** button to enter sub-menu.

Wired Connection (Ethernet)

Press ▼ / ▲ button to select Wired Connection (Ethernet). Press **OK** button to enter sub-menu and setup.

You can delete the connection history of the smart device that was connected to the TV via Bluetooth

General

Highlight the item and press **OK** button to enter the sub-menu.

Press ▼ / ▲ button to select General.

AI Service

You can enable the recommended services based on the usage history. Press button to select AI Service. Press **OK** button to enter sub-menu.

Voice Recognition Help

Press ▼ / ▲ button to select voice Recognition Help. Press **OK** button to setup. You can see the list of features you can use through voice control.

Voice Recognition Settings

Press ▼ / ▲ button to select Voice Recognition Settings. Press OK button to setup.

You can apply settings for voice recognition features.

AI Recommendation

Press ▼ / ▲ button to select AI Recommendation. Press OK button to enter sub-menu.

You can apply settings for voice recognition features.

Content Recommendations

Press ▼ / ▲ button to select Content Recommendations. Press OK button to select On/Off.

Network-Based Personalization Recommendations

Press ▼ / ▲ button to select Network-Based Personalization Recommendations. Press OK button to select On/Off.

Delete Usage Data

Press ▼ / ▲ button to select Delete Usage Data. Press **OK** button to select. It resets the content view history and the app usage history. If you reset them, it takes some time to receive recommendations for contents again.

Language

You can choose the menu language displayed on the screen and the audio language of the digital broadcast.

Press ▼ / ▲ button to select Language. Press **OK** button to enter sub-menu. (Optional: Menu Language / Primary Audio Language / Secondary Audio Language / Keyboard Languages / Primary Teletext Language / Secondary Teletext Language)

Press ▼ / ▲ button to select the menu and setup the language.

Location

You can change the location setting of your Smart TV.

Press ▼ / ▲ button to select Location. Press OK button to enter sub-menu.

Broadcast Country

You can set the broadcast country on your TV.

Service Area Postcode

This function is used to set the broadcast location of the TV by entering your postcode.

Services Country

If you don't set the Set Automatically, you can select the country manually.

Time

You can check the time or configure related settings.

Press ▼ / ▲ button to select Time. Press OK button to enter sub-menu.

Set Automatically

The TV time is automatically set to the time of digital broadcasting information sent from the broadcasting station or the time sent from the server.

Press ▼ / ▲ button to select Set Automatically. Press OK button to select On /Off.

Time / Date / Time Zone

You can manually set the time and date if the automatically set current time is incorrect. Press ▼ / ▲ button to select Set Time / Date / Time Zone. Press **OK** button to select.

Custom Time Zone

When select the Custom in Time Zone, Custom Time Zone menu is activated. Press button to select Custom Time Zone. Press OK button to select.

Timers

Press ▼ / ▲ button to select Timers. Press OK button to enter sub-menu.

Sleep Timer

Press ▼ / ▲ button to select Sleep Timer.

Press ▼ / ▲ button to select Off/ 10min/20min /30min /60min/90min / 120min/180min/240min.

Power On Timer

Press ▼ / ▲ button to select Power On Timer. Press OK button to enter sub-menu to setup.

Power Off Timer

Press ▼ / ▲ button to select Power Off Timer. Press OK button to enter sub-menu to setup.

4 Hours Auto Power Off

Press ▼ / ▲ button to select 4 Hours Auto Power Off. Press OK button to select On/Off.

Safety

Press ▼ / ▲ button to select Safety. Press **OK** button to enter sub-menu. All the Options are available only when the Safety select **On**.

The initial password is set as "0000".

Press ▼ / ▲ button to select the option then press OK button to setup.

Account Management

Press ▼ / ▲ button to select Account Management. Press **OK** button to enter sub-menu. In Account Management, you can use your email address to create a new LG account.

Home Settings

Press ▼ / ▲ button to select Home Settings. Press **OK** button to enter sub-menu.

Home Auto Launch

Press ▼ / ▲ button to select Home Settings. Press **OK** button to select On/Off.

Additional Settings

Press ▼ / ▲ button to select Additional Settings. Press **OK** button to enter sub-menu.

Accessibility

Highlight the item and press **OK** button to enter the sub-menu. Press ▼ / ▲ button to select Accessibility.

Audio Guidance

Press ▼ / ▲ button to select Audio Guidance. Press **OK** button to enter sub-menu. All the Options are available only when the Audio Guidance select **On**.

Audio Description

Press ▼ / ▲ button to select Audio Description. Press ◀ / ▶ button to adjust. It is only available when Audio description setting **ON**.

Audio Description Volume

Press ▼ / ▲ button to select Audio Description Volume. Press OK button to select On/Off.

High Contrast/Grayscale/Invert Colors/Hard of Hearing

Press ▼ / ▲ button to select High Contrast/Grayscale/Invert Colors/ Hard of Hearing. Press OK button to select On/Off.

Subtitles

Press ▼ / ▲ button to select Subtitles. Press OK button to enter sub-menu.

Then press ▼ / ▲ button to select and setup.

Support

Highlight the item and press OK button to enter the sub-menu.

Press ▼ / ▲ button to select Support.

Software Update

Uses software update to check and obtain the latest version.

Press ▼ / ▲ button to select Software Update. Press **OK** button to enter sub-menu.

Then press ▼ / ▲ button to select and setup.

Allow Automatic Updates

Press ▼ / ▲ button to select Allow Automatic Updates.

If set to On, updates will be proceeded automatically without asking when there is a new update after a version check.

Check for updates

Press ▼ / ▲ button to select Check for updates. Press OK button to select On/Off.

TV Information

You can view information including Model, Serial Number, Device Name.

Press ▼ / ▲ button to select TV Information. Press OK button to enter sub-menu.

Notifications

Press ▼ / ▲ button to select Notifications. Press OK button to enter sub-menu.

- 1) You can check the details by selecting the desired item. If it supports shortcuts, you can launch the app.
- 2) You can delete notification.
- 3) You can delete all notifications.

Additional Settings

Press ▼ / ▲ button to select Additional Settings. Press OK button to enter sub-menu.

User Agreements

Press ▼ / ▲ button to select User Agreements. Press OK button to select. These are the terms and conditions for privacy for the use of Smart TV-related services.

Legal Notice

Press ▼ / ▲ button to select Legal Notice. Press OK button to select. It's a legal notice for services provided via TV.

Open-Source Software Notice

Press ▼ / ▲ button to select Legal Notice. Press **OK** button to select. You can view the instructions for each item.

Reset to Initial Settings

Press ▼ / ▲ button to select Reset to Initial Settings. Press **OK** button to enter sub-menu.

Return TV to its initial settings. This will revert all settings to their default values.

After reset, the TV will automatically turn off and on.

Note: If Safety is set to On, you should type the password to Reset to Initial Settings.

Media

Connect a USB storage device (USB HDD, USB stick) to the USB port on the TV to enjoy the content files stored on the USB storage device on your TV.

Viewing Photos and Video

You can view photos and videos using the Photo & Video app.

- 1) Select your desired type of content and viewing method.
- 2) Select and delete the desired content.
- 3) Select the content you want to play. You can only select the same type of content as you first selected.
- 4) You can copy content to a USB storage device.
- 5) Launch Search.

Using Photo Player

Selecting a photo in the Photo & Video app runs the photo player. You can view your saved photos.

- 1) Returns to the entire content list.
- 2) You can play background music by running the music player.
- 3) You can zoom in/out of the photos.
- 4) Starts the slide show.
- 5) Rotates photos.
- 6) 360-degree photos can be viewed in 360 degrees.
- 7) You can set the size of a photo or change the speed and effect of a slide show.

Using Video Player

Selecting a photo in the Photo & Video app runs the photo player. You can view your saved videos.



- 1) Returns to the entire content list.
- 2) You can select other content by displaying the playlist while watching a video.
- 3) You can control basic video playback functions.
- 4) Rotates video.
- 5) 360-degree videos can be viewed in 360 degrees.
- 6) You can do the settings related to play on repeat of the video.
- 7) You can set additional options.

Playing Music

You can listen to music by using the Music app.

- 1) Select the desired type of content list.
- 2) Select and delete the desired content.
- 3) Select content and add it to My Playlist.
- 4) You can copy content to a USB storage device.
- 5) Open the music player.
- 6) Launch Search.

Using Music Player

You can play music conveniently by selecting the music files saved in the Music app or by selecting the music player icon during content playback in apps such as Photo & Video.

- 1) You can play music from the selected storage device.
- 2) You can set repeat playback and random playback.
- 3) The configurable items differ depending on mode.
- 4) You can change the position of the music player.
- 5) You can minimize the music player.
- 6) This feature closes the music player.
- 7) Lyrics are available for music files that provide them.

In some music files, you can choose a lyric section and move the playback position.

SPECIFICATIONS

Model No	43HYN3203
Voltage	AC 100-240 ~ 50/60 Hz
Power Consumption	85W
Inch	43"
Resolution	1920 x 1080
Speaker Output	2 x 8 W
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI
Output	1 x Headphone Output, 1x Digital Audio Output
Menu OSD	Multi-Language
Aspect Ratio	16:9

Model No	50HYN3204/50HYN3205
Voltage	AC 100-240 ~ 50/60 Hz
Power Consumption	120W
Inch	50"
Resolution	3840 x 2160
Speaker Output	2 x 8 W
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI
Output	1 x Headphone Output, 1x Digital Audio Output
Menu OSD	Multi-Language
Aspect Ratio	16:9

Model No	55HYN3205
Voltage	AC 100-240 ~ 50/60 Hz
Power Consumption	150W
Inch	55"
Resolution	3840 x 2160
Speaker Output	2 x 8 W
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI
Output	1 x Headphone Output, 1x Digital Audio Output
Menu OSD	Multi-Language
Aspect Ratio	16:9

Model No	65HYN3205
Voltage	AC 100-240 ~ 50/60 Hz
Power Consumption	160W
Inch	65"
Resolution	3840 x 2160
Speaker Output	2 x 8 W
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI
Output	1 x Headphone Output, 1x Digital Audio Output
Menu OSD	Multi-Language
Aspect Ratio	16:9

Model No	70HYN3205
Voltage	AC 100-240 ~ 50/60 Hz
Power Consumption	260W
Inch	70"
Resolution	3840 x 2160
Speaker Output	2 x 8 W
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI
Output	1 x Headphone Output, 1x Digital Audio Output
Menu OSD	Multi-Language
Aspect Ratio	16:9

Model No	75HYN3205
Voltage	AC 100-240 ~ 50/60 Hz
Power Consumption	290W
Inch	75"
Resolution	3840 x 2160
Speaker Output	2 x 8 W
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI
Output	1 x Headphone Output, 1x Digital Audio Output
Menu OSD	Multi-Language
Aspect Ratio	16:9

Model No	85HYN3205
Voltage	AC 100-240 ~ 50/60 Hz
Power Consumption	400W
Inch	85"
Resolution	3840 x 2160
Speaker Output	2 x 8 W
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI
Output	1 x Headphone Output, 1x Digital Audio Output
Menu OSD	Multi-Language
Aspect Ratio	16:9

Model No	100HYN3205
Voltage	AC 100-240 ~ 50/60 Hz
Power Consumption	560W
Inch	100"
Resolution	3840 x 2160
Speaker Output	2 x 8 W
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI
Output	1 x Headphone Output, 1x Digital Audio Output
Menu OSD	Multi-Language
Aspect Ratio	16:9

Model No	43HYN2203
Voltage	AC 100-240 ~ 50/60 Hz
Power Consumption	74W
Inch	43"
Resolution	1920 x 1080
Speaker Output	2 x 8 W
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI
Output	1 x Headphone Output, 1x Digital Audio Output
Menu OSD	Multi-Language
Aspect Ratio	16:9

Model No	50HYN2205	55HYN2205	65HYN2205
Voltage	AC 100-240V ~50/60 Hz		
Power Consumption	120W	140W	160W
Inch	50"	55"	65"
Resolution	3840 x 2160		
Speaker Output	2 x 8 W		
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI		
Output	1 x Headphone Output, 1 x Digital Audio Output		
Menu OSD	Multi-Language		
Aspect Ratio	16:9		

Model No	Q50HYN2205	Q55HYN2205	Q65HYN2205
VOLTAGE	AC 100-240V ~50/60 Hz		
Power Consumption	120W	140W	160W
SCREEN SIZE	50"	55"	65"
RESOLUTION	3840 x 2160		
Speaker Output	2 x 8 W		
Input	1 x RJ45 Ethernet, 3 x HDMI, 2x USB, 1 x Antenna, 1 x AV, 1 x CI		
Output	1 x Headphone Output, 1 x Digital Audio Output		
Menu OSD	Multi-Language		
Aspect Ratio	16:9		

MODEL NO	M55HYN2205	M65HYN2205
VOLTAGE	AC 100-240V 50/60 Hz	
Power Consumption	140W	160W
SCREEN SIZE	55"	65"
RESOLUTION	3840x2160	
Speaker Output	2X10 W	
INPUT	1x RJ45 Ethernet, 3x HDMI, 2x USB, 1x Antenna, 1x AV, 1x CI	
OUTPUT	1 x Headphone Output, 1 x Digital Audio Output	

TROUBLESHOOTING

Problem	Possible Cause	What to do
Device Won't Turn On	Power connection may have been made incorrectly	Make sure your device's power cord is plugged into
	Remote Control is not working	Make sure the batteries in your remote control are properly inserted.
No audio or video	Satellite dish antenna not properly tuned	Satellite dish antenna not properly
	No signal or weak signal	Check the cable connections, connection of LNB and other equipment and/or have the satellite dish adjusted
No Signal alert	Satellite dish antenna not properly tuned	Satellite dish antenna not properly
	LNB is damaged	LNB must be replaced

INFORMATION

In the event that it is understood that the goods are defective, the consumer, in accordance with Article 11 of Law No. 6502 on Consumer Protection, may use one of the rights:

- a) Return from the contract,
 - b) Requesting a discount from the sale price,
 - c) Request free repair of the sold goods,
 - d) Requesting the replacement of the sold product with a defect-free equivalent.
- In disputes arising from the exercise of his/her warranty rights, the consumer may apply to the Consumer Arbitration Committee or the Consumer Court in the place where the consumer has his/her place of residence or where the consumer transaction is made. **Note:** All illustrations, menu images, menu and function descriptions used in this manual are for reference only. The manufacturer reserves the right to change the technical specifications, device appearance and functions, menu appearance and functions, remote control and button functions, input/output connections and locations of the device without prior notice due to software and hardware development.

This sign indicates that waste electrical and electronic equipment should be collected separately. The uncontrolled disposal of devices bearing this marking, along with other household waste, is dangerous because hazardous waste can contaminate water and food supplies, posing a threat to human health and the environment. Devices bearing this mark must be recycled in recycling facilities order to protect human health and the environment and to promote the long-term reuse of material resources. If you have used devices or batteries with this mark that have reached the end of their economic life, please contact recycling organizations or municipalities for safe recycling and follow local procedures.

HYUNDAI
ELECTRONICS



For Inquiries, Please Contact:

MANUFACTURER / IMPORTER COMPANY

SKY İNOVASYON VE TEKNOLOJİ A.Ş.

Başakşehir Mah. Hürriyet Bulvarı

No:119 Başakşehir / İstanbul / Türkiye

Tel: 444 23 30 (pbx)

info@skytech.com.tr / www.skytech.com.tr

USING LIFE SPAN IS 10 (TEN) YEARS.



Manufactured / Distributed by Skyteoh, Türkiye
Licensed by HYUNDAI Corporation Holdings, Korea